

OBD CABLE ADAPTERS

TRUCKS

For CARS diagnostic products please contact your local distributor

auto-com[®]



2+2 VAG, OBD test cable
Part no: 900 200 650



14-pin, MB Sprinter + VW LT, OBD test cable
Part no: 900 200 651



2-pin PSA, OBD test cable
Part no: 900 200 653*



30-pin PSA, OBD test cable
Part no: 900 200 654



3-pin Fiat, OBD test cable
Part no: 900 200 657*



38-pin MB, OBD test cable
Part no: 900 200 659



FVV, Ford, Volvo, Audi and VW, OBD test cable
Part no: 900 200 660*



8-pin Volvo, OBD test cable
Part no: 900 200 661



16-pin Scania/DAF, OBD test cable
Part no: 900 200 662



12-pin MAN, OBD test cable
Part no: 900 200 663



37-pin MAN, OBD test cable
Part no: 900 200 664



30-pin Iveco OBD test cable
Part no: 900 200 665




12-pin Renault OBD test cable
Part no: 900 200 666



4-pin Haldex Trailer test cable
Part no: 900 200 667



7-pin Knorr/Wabco Trailer test cable
Part no: 900 200 669

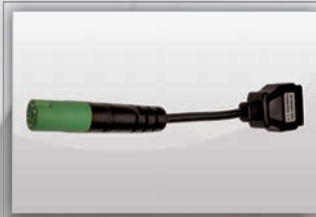

4-pin Haldex (ECU) Trailer test cable
Part no: 900 200 671



7-pin ISO 7638 Trailer test cable
Part no: 900 200 672



38-pin Iveco OBD test cable
Part no: 900 200 673